


# XDJ-R1

## Hardware Diagram for Virtual DJ

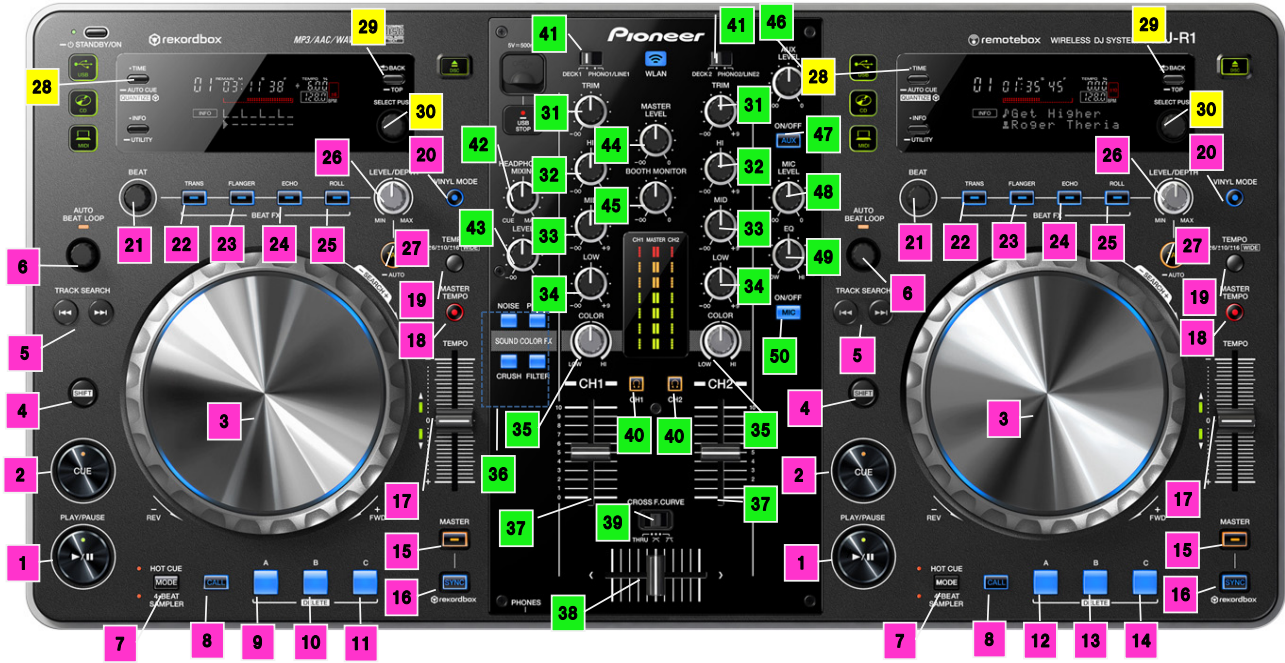

Group	No.	Name	Function	(+ SHIFT)	
Deck	1	▶/⏸ (PLAY/PAUSE)	Play/Pause	Play Stutter	
	2	CUE	CUE	-	
	3	JOG	Top plate Outer wheel	Scratch (VINYL mode On), Pitch Bend (VINYL mode Off) Pitch Bend	Search
	4	SHIFT	-	-	Jump to the beginning of the track
	5	TRACK SEARCH	⏮ ⏭	Set a Loop In point Set a Loop Out point	-
	6	AUTO BEAT LOOP	Turn Press	Select Auto Loop length/Loop Half & double Auto Loop On/Off	Shift 1-beat Loop Reloop
	7	MODE(HOT CUE/SAMPLER)	-	Hot Cue/Sampler mode switch	-
	8	CALL	-	Sampler Play/Pause (When SAMPLER mode is selected)	Select Sampler
	9	HOT CUE/SAMPLER A	-	Set/Play Hot Cue Point A Set/Play Sampler (beat)	Delete Hot Cue Point A Play Sampler (beat) from the beginning
	10	HOT CUE/SAMPLER B	-	Set/Play Hot Cue Point B Set/Play Sampler (Low Hip)	Delete Hot Cue Point B Play Sampler (Low Hip) from the beginning
	11	HOT CUE/SAMPLER C	-	Set/Play Hot Cue Point C Set/Play Sampler (Echo Bass)	Delete Hot Cue Point C Play Sampler (Echo Bass) from the beginning
	12	HOT CUE/SAMPLER A	-	Set/Play Hot Cue Point A Set/Play Sampler (Siren(long))	Delete Hot Cue Point A Play Sampler (Siren(long)) from the beginning
	13	HOT CUE/SAMPLER B	-	Set/Play Hot Cue Point B Set/Play Sampler (Siren(short))	Delete Hot Cue Point B Play Sampler (Siren(short)) from the beginning
	14	HOT CUE/SAMPLER C	-	Set/Play Hot Cue Point C Set/Play Sampler (horn)	Delete Hot Cue Point C Play Sampler (horn) from the beginning
	15	MASTER	-	Select Master Deck	-
	16	SYNC	-	Beat Sync	-
	17	TEMPO	-	Tempo Control	-
	18	MASTER TEMPO	-	Key lock On/Off	-
	19	TEMPO RANGE	-	Select Tempo Range (6%, 10%, 16%, 100%)	-
	20	VINYL MODE	-	Vinyl mode On/Off	-
	21	BEAT	-	Effect Parameter 1	Move Grid <sup>1)</sup>
	22	BEAT FX(TRANS)	-	Selected Effect On/Off	Select Effect
	23	BEAT FX(FLANGER)	-	FLANGER On/Off	Select FLANGER
	24	BEAT FX(ECHO)	-	CUT On/Off	Select CUT
	25	BEAT FX(ROLL)	-	DELAY On/Off	Select DELAY
	26	LEVEL/DEPTH	-	Effect Parameter 2	Adjust the selected Sampler Volume
	27	TAP	-	Manual Tap	-
Browse	28	TIME(AUTO CUE, QUANTIZE)	Switch deck	-	
	29	BACK	[When the cursor is on the folder panel] Open/Close a folder [When the cursor is on the track list] Shift to Folder Panel	-	
	30	SELECT PUSH	Turn Press	Move the cursor within the Folder Panel/Track List [When the cursor is on the folder panel] Shift to Track List [When the cursor is on a track]	Switch the Mixer panel Maximize the Browse Panel

Group	No.	Name	Function	(+ SHIFT)	
Mixer	31	TRIM	GAIN	GAIN	
	32	HI	EQ (HI)	EQ (HI)	
	33	MID	EQ (MID)	EQ (MID)	
	34	LOW	EQ (LOW)	EQ (LOW)	
	35	COLOR	When SOUND COLOR FX [FILTER] is ON: Filter When SOUND COLOR FX [PITCH] is ON: Key Control	When SOUND COLOR FX [FILTER] is ON: Filter When SOUND COLOR FX [PITCH] is ON: Key Control	
	36	SOUND COLOR FX	NOISE	-	-
		CRASH	-	-	-
		PITCH	Key Control Enable/Disable	-	-
	37	Channel Fader	FILTER	Filter Enable/Disable	-
		Channel Fader	Channel Fader	Channel Fader	Channel Fader
	38	Crossfader	Crossfader	Crossfader	Crossfader
	39	Crossfader Curve Switch	Crossfader Curve Switch	Crossfader Curve Switch	Crossfader Curve Switch
	40	CUE (H)	Headphone monitor On/Off	-	-
	41	DECK_PHONE/LINE Switch	Input Switch <sup>2)</sup>	Input Switch <sup>2)</sup>	Input Switch <sup>2)</sup>
	42	HEADPHONES MIXING	Headphone monitor balance <sup>3)</sup>	Headphone monitor balance <sup>3)</sup>	Headphone monitor balance <sup>3)</sup>
	43	HEADPHONES LEVEL	Headphone volume adjustment <sup>3)</sup>	Headphone volume adjustment <sup>3)</sup>	Headphone volume adjustment <sup>3)</sup>
	44	MASTER LEVEL	Master Volume adjustment	Master Volume adjustment	Master Volume adjustment
45	BOOTH MONITOR	Booth monitor adjustment	Booth monitor adjustment	Booth monitor adjustment	
46	AUX LEVEL	AUX Volume adjustment	AUX Volume adjustment	AUX Volume adjustment	
47	AUX(ON/OFF)	AUX On/Off	AUX On/Off	AUX On/Off	
48	MIC LEVEL	MIC Volume adjustment	MIC Volume adjustment	MIC Volume adjustment	
49	MIC EQ	MIC Equalizer	MIC Equalizer	MIC Equalizer	
50	MIC (ON/OFF)	MIC On/Off	MIC On/Off	MIC On/Off	

<sup>1)</sup> Only available in Virtual DJ Pro version.  
<sup>2)</sup> Select [Deck] when playing a track loaded to a deck on Virtual DJ GUI.  
<sup>3)</sup> When monitoring the sound by the headphone, set the HEADPHONES MIX knob at 0% on Virtual DJ GUI.

The functions of the hardware of XDJ-R1.