


XDJ-R1

Hardware Diagram for VirtualDJ 8

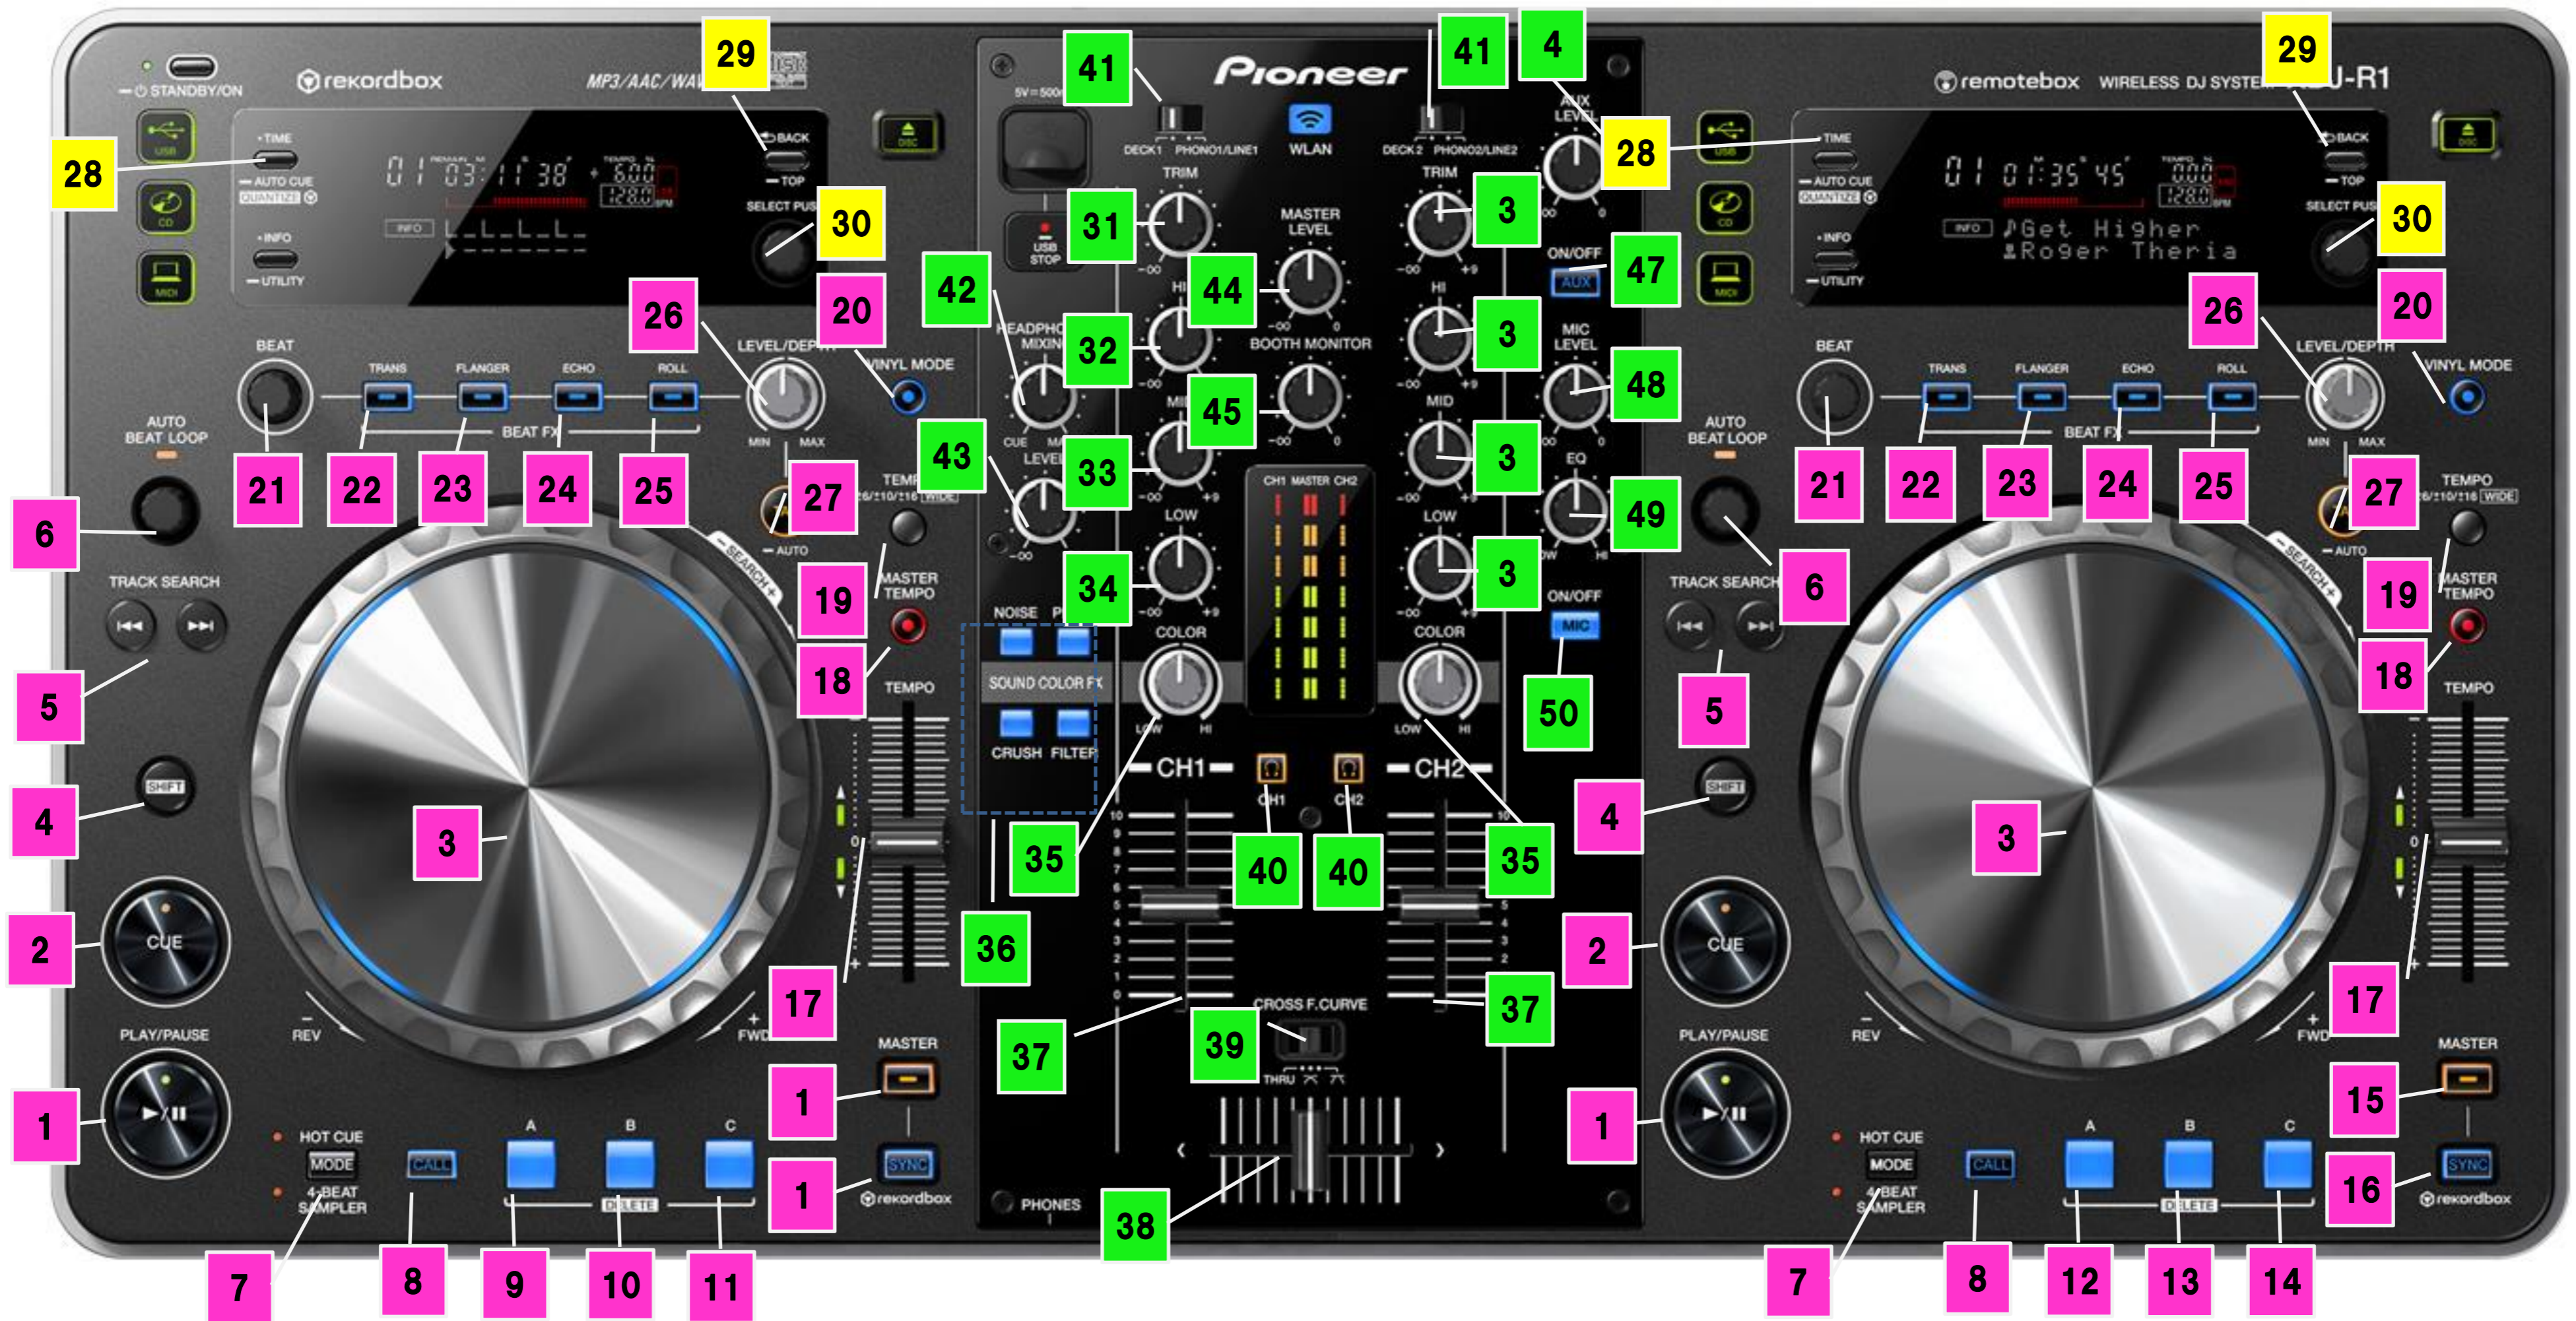

Group	No.	Name	Function	(+ SHIFT)	
Deck	1	▶/ (PLAY/PAUSE)	Play/Pause	Play Stutter	
	2	CUE	CUE	Jump to the beginning of the track	
	3	JOG	Top plate Outer wheel	Scratch (VINYL mode On), Pitch Bend (VINYL mode Off)	Search
	4	SHIFT			
	5	TRACK SEARCH	⏪ ⏩	Set a Loop In point Set a Loop Out point	
	6	AUTO BEAT LOOP	Turn Press	Select Auto Loop length/Loop Half & double Auto Loop On/Off	Shift 1--beat Loop Reloop
	7	MODE(HOT CUE/SAMPLER)		Hot Cue/Sampler mode switch	
	8	CALL		Select Sampler (When SAMPLER mode is selected)	
	9	HOT CUE/SAMPLER A		Set/Play Hot Cue Point A Triggers a Sample ³	Delete Hot Cue Point A Stop the sample
	10	HOT CUE/SAMPLER B		Set/Play Hot Cue Point B Triggers a Sample ³	Delete Hot Cue Point B Stop the sample
	11	HOT CUE/SAMPLER C		Set/Play Hot Cue Point C Triggers a Sample ³	Delete Hot Cue Point C Stop the sample
	12	HOT CUE/SAMPLER A		Set/Play Hot Cue Point A Triggers a Sample ³	Delete Hot Cue Point A Stop the sample
	13	HOT CUE/SAMPLER B		Set/Play Hot Cue Point B Triggers a Sample ³	Delete Hot Cue Point B Stop the sample
	14	HOT CUE/SAMPLER C		Set/Play Hot Cue Point C Triggers a Sample ³	Delete Hot Cue Point C Stop the sample
	15	MASTER		Select Master Deck	
	16	SYNC		Beat Sync	
	17	TEMPO		Tempo Control	
18	MASTER TEMPO		Key lock On/Off		
19	TEMPO RANGE		Select Tempo Range (6%, 10%, 16%, 100%)		
20	VINYL MODE		Vinyl mode On/Off		
21	BEAT		Effect Parameter 1	Move Grid ⁵	
22	BEAT FX (TRANS)		Selected Effect On/Off	Select Effect	
23	BEAT FX (FLANGER)		FLANGER On/Off	Select FLANGER	
24	BEAT FX (ECHO)		ECHO On/Off	Select ECHO	
25	BEAT FX (ROLL)		ROLL On/Off	Select ROLL	
26	LEVEL/DEPTH		Effect Parameter 2	Adjust the selected Sampler Volume	
27	TAP		Manual Tap		
Browse	28	TIME(AUTO CUE, QUANTIZE)	Switch deck		
	29	BACK	Set the focus of the Browser into the Folders window. [When focus is already set to the folders window] Open/Close a folder	Switch the Mixer panel	
	30	SELECT PUSH	Turn	Scroll through files or folders [When focus is on the Folders window]	Switch Sideview ⁴
			Press	Set focus to the Songs window [When focus is on the Songs window] Load the track	Maximize the Browse Panel

Group	No.	Name	Function	(+ SHIFT)	
Mixer	31	TRIM	GAIN	GAIN	
	32	HI	EQ (HI)	EQ (HI)	
	33	MID	EQ (MID)	EQ (MID)	
	34	LOW	EQ (LOW)	EQ (LOW)	
	35	COLOR	When SOUND COLOR FX [FILTER] is ON: Filter When SOUND COLOR FX [PITCH] is ON: Key Control	When SOUND COLOR FX [FILTER] is ON: Filter When SOUND COLOR FX [PITCH] is ON: Key Control	
	36	SOUND COLOR FX	NOISE		
			CRASH		
			PITCH	Key Control Enable/Disable	
			FILTER	Filter Enable/Disable	
	37	Channel Fader	Channel Fader	Channel Fader	
	38	Crossfader	Crossfader	Crossfader	
	39	Crossfader Curve Switch	Crossfader Curve Switch	Crossfader Curve Switch	
	40	CUE	Headphone monitor On/Off		
	41	DECK, PHONE/LINE Switch	Input Switch ¹	Input Switch ¹	
	42	HEADPHONES MIXING	Headphone monitor balance ²	Headphone monitor balance ²	
	43	HEADPHONES LEVEL	Headphone volume adjustment ²	Headphone volume adjustment ²	
	44	MASTER LEVEL	Master Volume adjustment	Master Volume adjustment	
45	BOOTH MONITOR	Booth monitor adjustment	Booth monitor adjustment		
46	AUX LEVEL	AUX Volume adjustment	AUX Volume adjustment		
47	AUX(ON/OFF)	AUX On/Off	AUX On/Off		
48	MIC LEVEL	MIC Volume adjustment	MIC Volume adjustment		
49	MIC EQ	MIC Equalizer	MIC Equalizer		
50	MIC (ON/OFF)	MIC On/Off	MIC On/Off		

*1 Select [Deck] when playing a track loaded to a deck on Virtual DJ GUI.

*2 Level is set to maximum when starting VirtualDJ. Make sure to set knob on the VirtualDJ to minimum level before using.

*3 The trigger/playing behavior depends on the selected Trigger mode of the Bank

On/Off: Switch play/stop by pressing
Hold: Play while pressing
Stutter: Play from the start point by pressing
Unmute: Unmute by pressing

*4 Only available in Virtual DJ Pro version. (Only the Sampler Trigger pad view is available in VirtualDJ LE.)

*5 Only available in Virtual DJ Pro version.