


XDJ-RR

Hardware Diagram for rekordbox dj

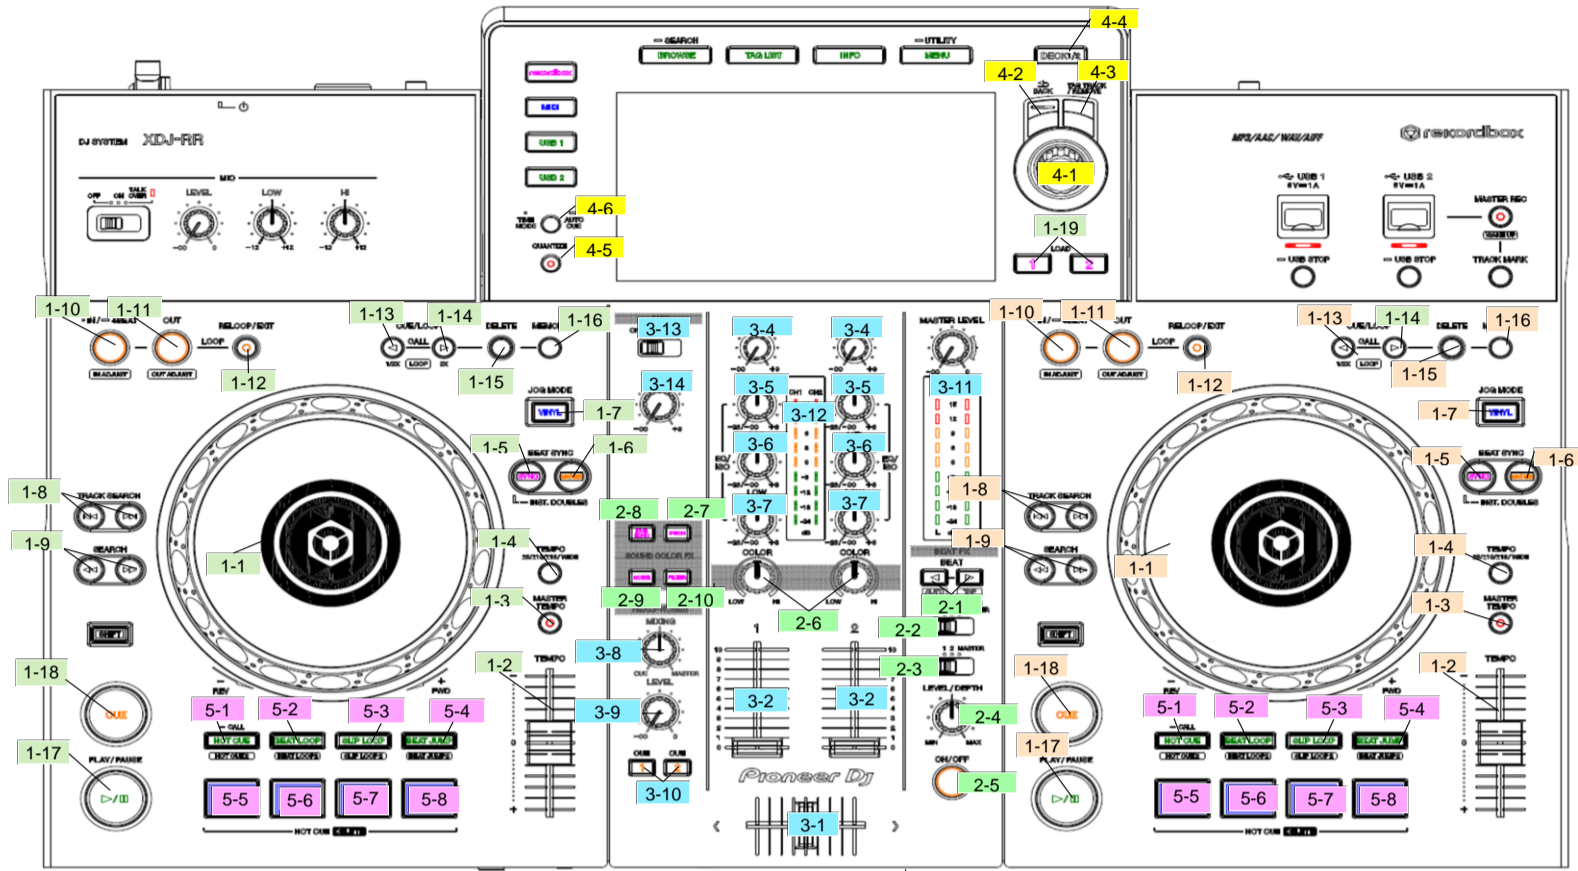

3-3

GROUP	No.	NAME	FUNCTION	+SHIFT
1, DECK				
1	JOG	天面 ピッチベンド (Vinyl On) 背面 ピッチベンド	スクラッチ (Vinyl On) ピッチベンド (Vinyl Off)	Search (SKIP mode)
2	TEMPO		テンポ調整	
3	MASTER TEMPO		Master Tempo On/Off	
4	TEMPO RANGE		Tempo Range	
5	SYNC		Sync On/Off	
6	MASTER		Master	
7	JOG MODE		Vinyl On/Off	
8	TRACK SEARCH		PREV / NEXT TRACK	
9	SEARCH		BEAT JUMP(再生中:8拍, 停止中:微調整)	
10	LOOP IN		Loop in / Loop in adjust	
11	LOOP OUT		Loop out / Loop out adjust	
12	RELOOP/EXIT		Reloop/Exit	
13	CALL NEXT / 2X		CUE/LOOP CALL, FWD	
14	CALL PREV / 1/2X	ループ再生中	Loop Size Select (Double)	
15	DELETE	ループ再生中	DELETE	
16	MEMORY		MEMORY	
17	PLAY/PAUSE		再生/一時停止	
18	CUE		Cue設定/再生, BackCue	
19	LOAD		トラックのロード	
		2回押し	INSTANT DOUBLES	
2, EFFECT				
1	BEAT	RIGHT	FX beat up	TAP
		LEFT	FX beat down	AUTO
2	EFFECT SELECT	ECHO	FX1: ECHO	
		REVERB	FX1: REVERB	
		FLANGER	FX1: FLANGER	
3	CH SELECT	1CH	FX CH1 ON (他はOFF)	
		2CH	FX CH2 ON (他はOFF)	
		MASTER	MASTER ON (他はOFF)	
4	LEVEL DEPTH		FX1 レベル調整	
5	EFFECT ON/OFF		FX1 On/Off	FX1 選択
6	COLOR		SOUND COLOR FXパラメーター調整 (CH1~4)	
7	CFX PITCH		SOUND COLOR FX (PITCH) On/Off	
8	CFX DUB ECO		SOUND COLOR FX (DUB ECO) On/Off	
9	CFX NOISE		SOUND COLOR FX (NOISE) On/Off	
10	CFX FILTER		SOUND COLOR FX (FILTER) On/Off	
3, MIXER				
1	CROSSFADER		クロスフェーダー	
2	CH FADER		チャンネルフェーダー	
3	CROSS FADER CURVE		CROSS FADER CURVE	
4	TRIM		Gain	
5	HI		EQ (High)	
6	MID		EQ (Mid)	
7	LOW		EQ (Low)	
8	HEADPHONES MIXING		No function assigned here	
9	HEADPHONES LEVEL		No function assigned here	
10	CUE (Headphone)		Headphone CUE On/Off	
11	MASTER LEVEL		No function assigned here	
12	CH LEVEL		No function assigned here	
13	AUX SELECT		No function assigned here	
14	AUX TRIM		No function assigned here	
4, BROWSER				
1	Rotary Selector	回す 押す	Browse(Track/Folder Select) エリア移動 (順周り)	拡大波形 Zoom In/Out
2	BACK		階層移動, エリア移動 (逆周り)	リスト表示切替
3	TAG TRACK/REMOVE		Tag Listへの登録, 解除	Related Tracks 表示切替
4	DECK 1/2		Deck 1/2 からDeck 3/4に切り替え	SHIFTを押している方のDECK切り替え
5	QUANTIZE		Quantize on/off	
6	TIME MODE / AUTO CUE		TIME MODE切替(Remain/EIapse)	
		長押し	A.Cue On/Off	

GROUP	No.	NAME	FUNCTION	+SHIFT
5, PERFORMANCE BUTTONS				
1	HOT CUE		HOT CUE	HOT CUE (EXTENSION1)
2	BEAT LOOP		BEAT LOOP	BEAT LOOP (EXTENSION2)
3	SLIP LOOP		PAD FX	PAD FX (EXTENSION3)
4	BEAT JUMP		BEAT JUMP	BEAT JUMP (EXTENSION4)
5	PERFORMANCE BUTTON 1	モード		
		HOT CUE	Set/call Hot Cue A	Delete HOT CUE A
		HOT CUE (EXTENSION1)	Set/call Hot Cue E	Delete HOT CUE E
		BEAT LOOP	4 BEAT LOOP	4 BEAT LOOP
		BEAT LOOP (EXTENSION2)	1/4 BEAT LOOP	1/4 BEAT LOOP
		SLIP LOOP	PAD FX1(Pad1)	PAD FX1(Pad5)
		SLIP LOOP (EXTENSION3)	PAD FX1(Pad9)	PAD FX1(Pad13)
		BEAT JUMP	BEAT JUMP	No function assigned here
BEAT JUMP (EXTENSION4)	BEAT JUMP	No function assigned here		
6	PERFORMANCE BUTTON 2	モード		
		HOT CUE	Set/call Hot Cue B	Delete HOT CUE B
		HOT CUE (EXTENSION1)	Set/call Hot Cue F	Delete HOT CUE F
		BEAT LOOP	8 BEAT LOOP	8 BEAT LOOP
		BEAT LOOP (EXTENSION2)	1/2 BEAT LOOP	1/2 BEAT LOOP
		SLIP LOOP	PAD FX1(Pad2)	PAD FX1(Pad6)
		SLIP LOOP (EXTENSION3)	PAD FX1(Pad10)	PAD FX1(Pad14)
		BEAT JUMP	BEAT JUMP	No function assigned here
BEAT JUMP (EXTENSION4)	BEAT JUMP	No function assigned here		
7	PERFORMANCE BUTTON 3	モード		
		HOT CUE	Set/call Hot Cue C	Delete HOT CUE C
		HOT CUE (EXTENSION1)	Set/call Hot Cue G	Delete HOT CUE G
		BEAT LOOP	16 BEAT LOOP	16 BEAT LOOP
		BEAT LOOP (EXTENSION2)	1 BEAT LOOP	1 BEAT LOOP
		SLIP LOOP	PAD FX1(Pad3)	PAD FX1(Pad7)
		SLIP LOOP (EXTENSION3)	PAD FX1(Pad11)	PAD FX1(Pad15)
		BEAT JUMP	BEAT JUMP	BEAT JUMP Previous Page
BEAT JUMP (EXTENSION4)	BEAT JUMP	BEAT JUMP Previous Page		
8	PERFORMANCE BUTTON 4	モード		
		HOT CUE	Set/call Hot Cue D	Delete HOT CUE D
		HOT CUE (EXTENSION1)	Set/call Hot Cue H	Delete HOT CUE H
		BEAT LOOP	32 BEAT LOOP	32 BEAT LOOP
		BEAT LOOP (EXTENSION2)	2 BEAT LOOP	2 BEAT LOOP
		SLIP LOOP	PAD FX1(Pad4)	PAD FX1(Pad8)
		SLIP LOOP (EXTENSION3)	PAD FX1(Pad12)	PAD FX1(Pad16)
		BEAT JUMP	BEAT JUMP	BEAT JUMP Next Page
BEAT JUMP (EXTENSION4)	BEAT JUMP	BEAT JUMP Next Page		

※LEDの点灯/消灯状態はGUIと一致しない場合がある。