





| GROUP     | No.        | NAME               |                        | FUNCTION                                 | +SHIFT     |            |
|-----------|------------|--------------------|------------------------|--|------------|------------|
| 1, DECK   | 1          | JOG                | Top of jog             | Scratch (Vinyl on)                       | Seek       |            |
|           |            |                    |                        | Pitch Bend (Vinyl off)                   |            |            |
|           |            | Side of jog        | Pitch Bend             |  |            |            |
|           | 2          | TEMPO              |                        | Tempo Control                            |            |            |
|           | 3          | MASTER TEMPO       |                        | Master Tempo On/Off                      |            |            |
|           | 4          | TEMPO RANGE        |                        | Tempo Range                              |            |            |
|           | 5          | SYNC               |                        | Sync On/Off                              |            |            |
|           | 6          | MASTER             |                        | Master                                   |            |            |
|           | 7          | JOG MODE           |                        | Vinyl On/Off                             |            |            |
|           | 8          | VINYL SPEED ADJUST |                        | Adjust the speed of playback stop        | -          |            |
|           | 9          | TRACK SEARCH       |                        | PREV / NEXT TRACK                        |            |            |
|           | 10         | SEARCH             |                        | While Play: BEAT JUMP 8                  |            |            |
|           |            |                    |                        | While Pause: BEATJUMP FINE               |            |            |
|           | 11         | REVERSE            |                        | Reverse                                  |            |            |
|           | 12         | SLIP               |                        | SLIP mode On/Off                         |            |            |
|           | 13         | SHIFT              |                        | Shift                                    |            |            |
|           | 14         | LOOP IN            |                        | Loop in / Loop in adjust                 | RE-TRIGGER |            |
|           |            |                    | Long press             | 4 BEAT Loop                              |            |            |
|           | 15         | LOOP OUT           |                        | Loop out/Adjust loop out                 |            |            |
|           | 16         | RELOOP/EXIT        |                        | Reloop/Exit                              |            |            |
|           | 17         | CALL NEXT / 2X     |                        | CUE/LOOP CALL, FWD                       |            |            |
|           |            |                    |                        | While Loop: Loop Size 2x                 |            |            |
|           |            | CALL PREV / 1/2X   |                        | CUE/LOOP CALL, REV                       |            |            |
|           |            |                    |                        | While Loop: Loop Size 1/2                |            |            |
|           | 18         | DELETE             |                        | DELETE                                   |            |            |
| 19        | MEMORY     |                    | MEMORY                 |  |            |            |
| 20        | PLAY/PAUSE |                    | Play/Pause             |  |            |            |
| 21        | CUE        |                    | Set Cue/Play, Back Cue |  |            |            |
| 22        | LOAD       |                    | Load Track             | Sort                                     |            |            |
| 2, EFFECT |            |                    |                        |  |            |            |
|           | 1          | BEAT               | RIGHT                  | FX beat up                               |            |            |
|           |            |                    | LEFT                   | FX beat down                             |            |            |
|           | 2          | TAP                |                        | FX TAP (Adjust tempo manually)           |            |            |
|           |            |                    | Long press             | FX auto beat                             |            |            |
|           | 3          | EFFECT SELECT      | DELAY                  | FX1 : DELAY                              |            |            |
|           |            |                    | ECHO                   | FX1 : ECHO                               |            |            |
|           |            |                    | SPIRAL                 | FX1 : SPIRAL                             |            |            |
|           |            |                    | REVERB                 | FX1 : REVERB                             |            |            |
|           |            |                    | TRANS                  | FX1 : TRANS                              |            |            |
|           |            |                    | FLANGER                | FX1 : FLANGER                            |            |            |
|           |            |                    | PITCH                  | FX1 : PITCH                              |            |            |
|           |            |                    | ROLL                   | FX1 : ROLL                               |            |            |
|           | 4          | CH SELECT          | 1                      | FX CH1 ON (Others are turned OFF)        |            |            |
|           |            |                    | 2                      | FX CH2 ON (Others are turned OFF)        |            |            |
|           |            |                    | MIC                    | FX CH3 ON (Others are turned OFF)        |            |            |
|           |            |                    | CF.1                   | FX CH4 ON (Others are turned OFF)        |            |            |
|           |            |                    | CF.2                   | SAMPLER ON (Others are turned OFF)       |            |            |
|           |            |                    | MASTER                 | MASTER ON (Others are turned OFF)        |            |            |
|           | 5          | TIME               |                        | Adjust FX Time                           |            |            |
|           | 6          | LEVEL DEPTH        |                        | Adjust FX1 Level                         |            |            |
|           | 7          | EFFECT ON/OFF      |                        |  | FX1 On/Off | FX1 select |
|           | 8          | COLOR              |                        | SOUND COLOR FX Parameter adjust (CH1 ~4) |            |            |
|           | 9          | CFX NOISE          |                        | SOUND COLOR FX (NOISE) On/Off            |            |            |
|           | 10         | CFX GATE/COMP      |                        | SOUND COLOR FX (GATE/COMP) On/Off        |            |            |
|           | 11         | CFX CRUSH          |                        | SOUND COLOR FX (CRUSH) On/Off            |            |            |
|           | 12         | CFX FILTER         |                        | SOUND COLOR FX (FILTER) On/Off           |            |            |

| GROUP         | No.                  | NAME                 |   | FUNCTION                          | +SHIFT   |
|---------------|----------------------|----------------------|---|-----------------------------------|--|
| 3, MIXER      |                      |                      |   |                                   |  |
|               | 1                    | CROSSFADER           |   | Crossfader                        |  |
|               | 2                    | CH FADER             |   | Channel fader                     |  |
|               | 3                    | CROSSFADER<br>ASSIGN | THRU  | Thru                              |  |
|               |                      |                      |  | Smooth                            |  |
|               |                      |                      |  | Sharp                             |  |
|               | 4                    | TRIM                 |   | Gain                              |  |
|               | 5                    | HI                   |   | EQ (High)                         |  |
|               | 6                    | MID                  |   | EQ (Mid)                          |  |
|               | 7                    | LOW                  |   | EQ (Low)                          |  |
|               | 8                    | HEADPHONES MIXING    |   | Monitor balance                   |  |
|               | 9                    | HEADPHONES LEVEL     |   | Monitor Volume                    |  |
|               | 10                   | CUE (Headphone)      |   | Headphone CUE On/Off              |  |
|               | 11                   | INPUT SWITCH         |   | Input Select                      |  |
|               | 16                   | MASTER LEVEL         |   | Master Out Volume                 |  |
|               | 17                   | BOOTH MONITOR LEVEL  |   | Booth Out Volume                  |  |
| 4, BROWSER    |                      |                      |   |                                   |  |
|               | 1                    | Rotary Selector      | rotate  | Browse(Track/Folder Select)       | Waveform Zoom In/Out                                 |
|               |                      |                      | push  | Show panels forward               |  |
|               | 2                    | BACK                 |   | Show tree view/panels backward    | Show Tag List/Playlist Palette                       |
|               | 3                    | TAG TRACK/REMOVE     |   | Add/delete Tag List               | Show Related Tracks                                  |
|               | 4                    | QUANTIZE             |   | Quantize on/off                   |  |
|               | 5                    | DECK 1/2             |   | Change Deck 1/2, Deck 3/4         | Deck Change the side of deck shift button is pressed |
| 6             | TIME MODE / AUTO CUE |                      | REMAINING / ELAPSED TIME  |                                   |  |
| 5, MULTI PADS |                      |                      |   |                                   |  |
|               | 1                    | HOT CUE              |   | HOT CUE 1-4                       | HOT CUE 5-8  |
|               | 2                    | AUTO BEAT LOOP       |   | AUTO BEAT LOOP                    | PAD FX 1   |
|               | 3                    | LOOP SLICE           |   | SLICER                            | SLICER LOOP  |
|               | 4,5                  | MULTI PAD            |   | mode                              |  |
|               | 6,7                  | A, B, C, D           | HOT CUE 1-4   | HOT CUE1,2,3,4                    | Delete HOT CUE1,2,3,4                                |
|               |                      |                      | HOT CUE 5-8   | HOT CUE 5,6,7,8                   | Delete HOT CUE 5,6,7,8                               |
|               |                      |                      | AUTO BEAT LOOP  | AUTO BEAT LOOP<br>(1,2,4,8 beat)  | AUTO BEAT LOOP<br>(1/16,1/8,1/4,1/2 beats)           |
|               |                      |                      | PAD FX 1  | PAD FX1 ON (Momentary)<br>1,2,3,4 | PAD FX1 ON (Momentary)<br>5,6,7,8                    |
|               |                      |                      | SLICER  | SLICER1,2,3,4                     | SLICER5,6,7,8  |
|               |                      |                      | SLICER LOOP   | SLICER LOOP1,2,3,4                | SLICER LOOP5,6,7,8                                   |

\* Lighting on/off state of the LED may not accord with GUI.

Note:

\* When XDJ-RX is connected to rekordbox, you have to set the [MIXER MODE] to [MIDI CONTROL] on the [UTILITY] screen.