


# XDJ-RX2

## Hardware Diagram for rekordbox dj

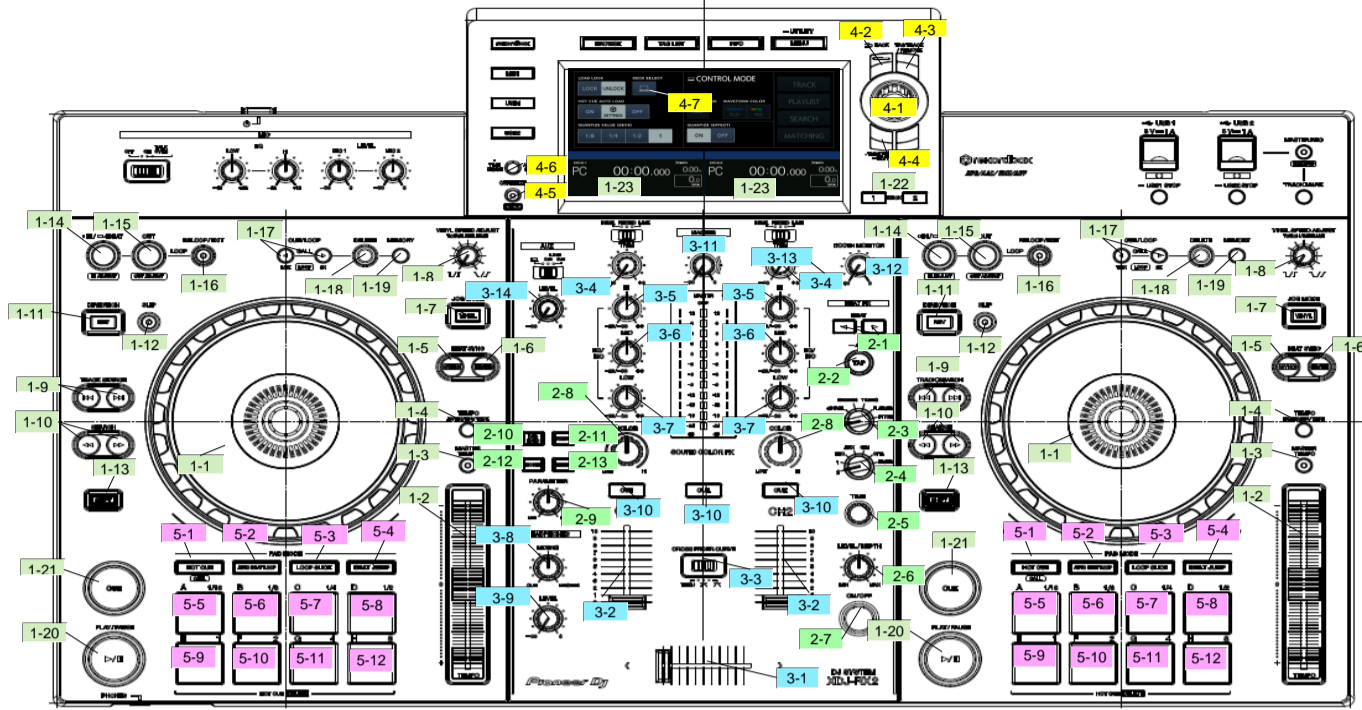

注意: rekordbox dj Ver. 5.6.1以上の組合せでお使いください。

GROUP	No.	NAME	FUNCTION	+SHIFT
<b>1, DECK</b>				
1	JOG	天盤 側面	スクラッチ (Vinyl On) ビッチベンド (Vinyl Off) ビッチベンド	Search
2	TEMPO		テンポ調整	
3	MASTER TEMPO		Master Tempo On/Off	
4	TEMPO RANGE		Tempo Range	
5	SYNC		Sync On/Off	
6	MASTER	長押し	MASTER INSTANT DOUBLES	
7	JOG MODE		Master Vinyl On/Off	
8	VINYL SPEED ADJUST		Vinyl Speed Adjust	
9	TRACK SEARCH		PREV / NEXT TRACK	
10	SEARCH		BEAT JUMP(再生中:8拍, 停止中:微調整)	
11	REVERSE		Reverse	
12	SLIP		SLIP mode On/Off	
13	SHIFT		Shift	
14	LOOP IN	長押し	Loop in / Loop in adjust 4 BEAT Loop	
15	LOOP OUT		Loop out / Loop out adjust	
16	RELOOP/EXIT		Reloop/Exit	
17	CALL NEXT / 2X	ループ再生中	CUE/LOOP CALL, FWD Loop Size Select (Double)	
17	CALL PREV / 1/2X	ループ再生中	CUE/LOOP CALL, REV Loop Size Select (Half)	
18	DELETE		DELETE	
19	MEMORY		MEMORY	
20	PLAY/PAUSE		再生 /一時停止	
21	CUE		CUE設定/再生, Back Cue トラックのロード	
22	LOAD		INSTANT DOUBLES	
23	NEEDLE SEARCH	2回押し	NEEDLE SEARCH	
<b>2, EFFECT</b>				
1	BEAT	RIGHT LEFT	FX beat up FX beat down	
2	TAP	長押し	FX TAP FX AUTO BEAT	
3	EFFECT SELECT	DELAY ECHO SPIRAL REVERB TRANS FLANGER PITCH ROLL	FX1: DELAY FX1: ECHO FX1: SPIRAL FX1: REVERB FX1: TRANS FX1: FLANGER FX1: PITCH FX1: ROLL	
4	CH SELECT	CF b CF A MIC AUX TCH ZCH MASTER	FX CH1: On (others: Off) FX CH2: On (others: Off) No function assigned here SAMPLER is On when AUX SELECT is Off (others: Off) FX CH3: On (others: Off) FX CH4: On (others: Off) MASTER: On (others: Off)	
5	TIME		TIME control	
6	LEVEL DEPTH		FX1 level control	
7	EFFECT ON/OFF		FX1 On/Off	Select FX1
8	COLOR		SOUND COLOR FX parameter control (CH1 - 4)	
9	PARAMETER		SOUND COLOR FX parameter control	
10	CFX NOISE		SOUND COLOR FX (NOISE) On/Off	
11	CFX DUB ECHO		SOUND COLOR FX (DUB ECHO) On/Off	
12	CFX SWEEP		SOUND COLOR FX (SWEEP) On/Off	
13	CFX FILTER		SOUND COLOR FX (FILTER) On/Off	
<b>3, MIXER</b>				
1	CROSSFADER		クロスフェーダー	
2	CH FADER		チャンネルフェーダー	
3	CROSS FADER CURVE		チャンネルフェーダーカーブ	
4	TRIM		Gain	
5	HI		EQ (High)	
6	MID		EQ (Mid)	
7	LOW		EQ (Low)	
8	HEADPHONES MIXING		No function assigned here	
9	HEADPHONES LEVEL		No function assigned here	
10	MASTER CUE(Headphone)		No function assigned here	
10	CUE (Headphone)		Headphone CUE On/Off	
11	MASTER LEVEL		No function assigned here	
12	BOOTH MONITOR LEVEL		No function assigned here	
13	AUX SELECT		No function assigned here	
14	AUX TRIM		SAMPLER volume when AUX SELECT off	

GROUP	No.	NAME	FUNCTION	+SHIFT
<b>4, BROWSER</b>				
1	Rotary Selector	回す 押す	Browse(Track/Folder Select) エリア移動 (順周り)	拡大波形 Zoom In/Out
2	BACK		階層移動, エリア移動 (逆周り)	リスト表示切替
3	TAG TRACK/REMOVE		Add/delete track to/from TAG LIST	Related Tracks 表示切替
4	TRACK FILTER		TRACK FILTER OPEN/CLOSE	
5	QUANTIZE		Quantize on/off	
6	TIME MODE / AUTO CUE		TIME MODE切替(Remain/Elapse) A.Cue On/Off	
7	DECK 1/2 (SHORT CUT画面)		Deck 1/2 からDeck 3/4に切り替え	SHIFTを押している方のDECK切り替え
<b>5, PERFORMANCE PADS</b>				
1	HOT CUE		HOT CUE	KEYBOARD
2	BEAT LOOP		BEAT LOOP	KEY SHIFT
3	SLIP LOOP		PAD FX 1	PAD FX2
4	BEAT JUMP		BEAT JUMP	SAMPLER
5	PERFORMANCE PAD A	モード	HOT CUE Set/call Hot Cue A BEAT LOOP 1/4 BEAT LOOP PAD FX1 PAD FX1 (page1) BEAT JUMP BEAT JUMP KEYBOARD HOT CUE選択/KEY SHIFT KEY SHIFT KEY SHIFT PAD FX2 PAD FX2 (page1) SAMPLER SAMPLER slot1再生	Delete HOT CUE A PAD FX1 (page2) No function assigned here Delete HOT CUE No function assigned here PAD FX2 (page2) SAMPLER slot1停止
6	PERFORMANCE PAD B	モード	HOT CUE Set/call Hot Cue B BEAT LOOP 1/2 BEAT LOOP PAD FX1 PAD FX1 (page1) BEAT JUMP BEAT JUMP KEYBOARD HOT CUE選択/KEY SHIFT KEY SHIFT KEY SHIFT PAD FX2 PAD FX2 (page1) SAMPLER SAMPLER slot2再生	Delete HOT CUE B PAD FX1 (page2) No function assigned here Delete HOT CUE No function assigned here PAD FX2 (page2) SAMPLER slot2停止
7	PERFORMANCE PAD C	モード	HOT CUE Set/call Hot Cue C BEAT LOOP 1 BEAT LOOP PAD FX1 PAD FX1 (page1) BEAT JUMP BEAT JUMP KEYBOARD HOT CUE選択/KEY SHIFT KEY SHIFT KEY SHIFT PAD FX2 PAD FX2 (page1) SAMPLER SAMPLER slot3再生	Delete HOT CUE C PAD FX1 (page2) No function assigned here Delete HOT CUE No function assigned here PAD FX2 (page2) SAMPLER slot3停止
8	PERFORMANCE PAD D	モード	HOT CUE Set/call Hot Cue D BEAT LOOP 2 BEAT LOOP PAD FX1 PAD FX1 (page1) BEAT JUMP BEAT JUMP KEYBOARD HOT CUE選択/KEY SHIFT KEY SHIFT KEY SHIFT PAD FX2 PAD FX2 (page1) SAMPLER SAMPLER slot4再生	Delete HOT CUE D PAD FX1 (page2) No function assigned here Delete HOT CUE No function assigned here PAD FX2 (page2) SAMPLER slot4停止
9	PERFORMANCE PAD E	モード	HOT CUE Set/call Hot Cue E BEAT LOOP 4 BEAT LOOP PAD FX1 PAD FX1 (page1) BEAT JUMP BEAT JUMP KEYBOARD HOT CUE選択/KEY SHIFT KEY SHIFT KEY SHIFT PAD FX2 PAD FX2 (page1) SAMPLER SAMPLER slot5再生	Delete HOT CUE E PAD FX1 (page2) No function assigned here Delete HOT CUE No function assigned here PAD FX2 (page2) SAMPLER slot5停止
10	PERFORMANCE PAD F	モード	HOT CUE Set/call Hot Cue F BEAT LOOP 8 BEAT LOOP PAD FX1 PAD FX1 (page1) BEAT JUMP BEAT JUMP KEYBOARD HOT CUE選択/KEY SHIFT KEY SHIFT KEY SHIFT PAD FX2 PAD FX2 (page1) SAMPLER SAMPLER slot6再生	Delete HOT CUE F PAD FX1 (page2) No function assigned here Delete HOT CUE No function assigned here PAD FX2 (page2) SAMPLER slot6停止
11	PERFORMANCE PAD G	モード	HOT CUE Set/call Hot Cue G BEAT LOOP 16 BEAT LOOP PAD FX1 PAD FX1 (page1) BEAT JUMP BEAT JUMP KEYBOARD HOT CUE選択/KEY SHIFT KEY SHIFT KEY SHIFT PAD FX2 PAD FX2 (page1) SAMPLER SAMPLER slot7再生	Delete HOT CUE G PAD FX1 (page2) BEAT JUMP Previous Page KEYBOARD Previous Page KEY SHIFT Previous Page PAD FX2 (page2) SAMPLER slot7停止
12	PERFORMANCE PAD H	モード	HOT CUE Set/call Hot Cue H BEAT LOOP 32 BEAT LOOP PAD FX1 PAD FX1 (page1) BEAT JUMP BEAT JUMP KEYBOARD HOT CUE選択/KEY SHIFT KEY SHIFT KEY SHIFT PAD FX2 PAD FX2 (page1) SAMPLER SAMPLER slot8再生	Delete HOT CUE H PAD FX1 (page2) BEAT JUMP Next Page KEYBOARD Next Page KEY SHIFT Next Page PAD FX2 (page2) SAMPLER slot8停止

※LEDの点灯/消灯状態はGUIと一致しない場合があります。