


XDJ-RX3

Hardware Diagram for rekordbox

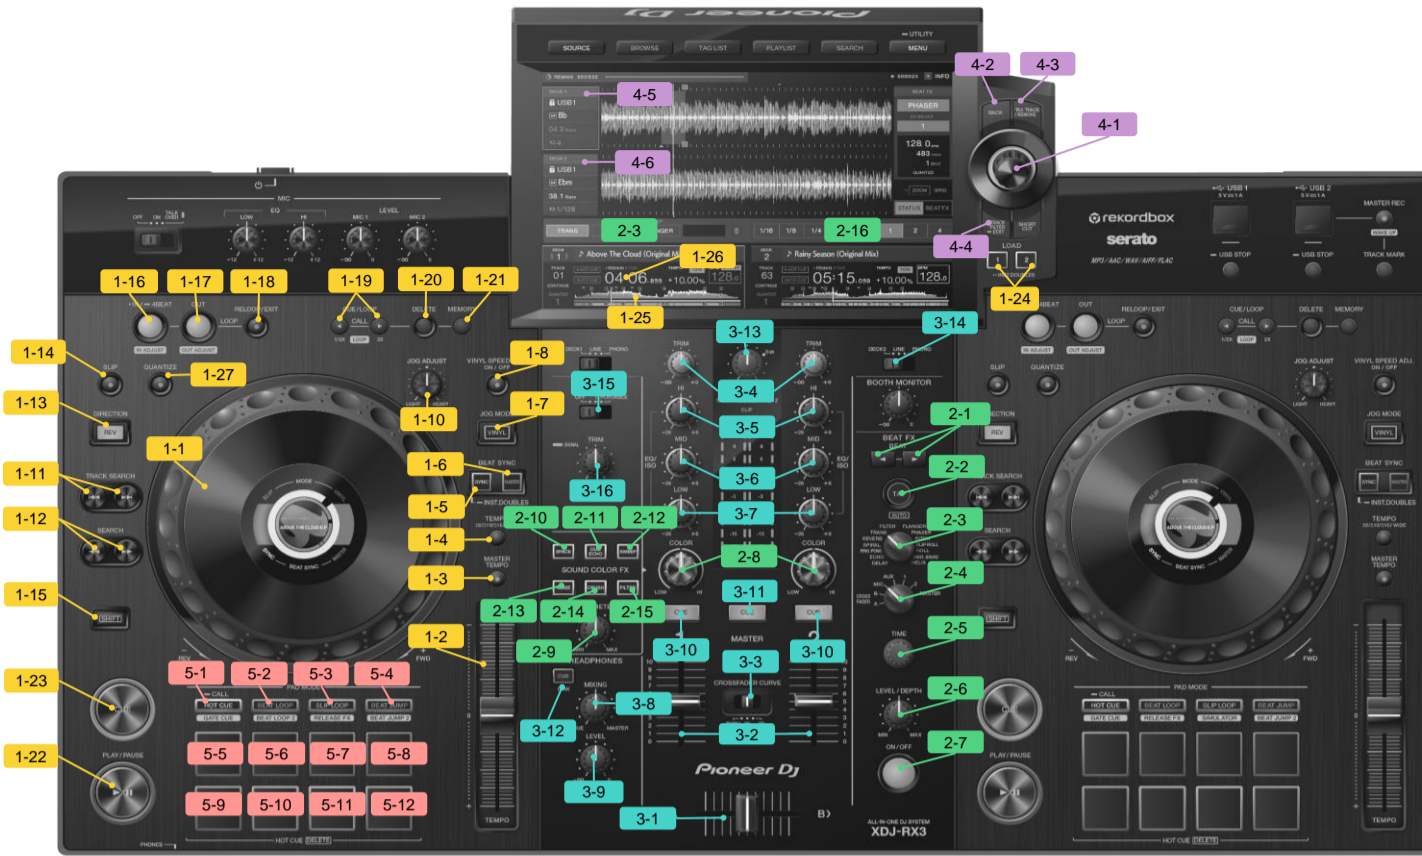

GROUP	No.	NAME	FUNCTION	+SHIFT
1, DECK *機能は左右デッキ共通です。				
1	1	JOG	スクラッチ (Vinyl On) ビッチベンド (Vinyl Off)	Search
			前面 ビッチベンド	
	2	TEMPO	テンポ調整	
	3	MASTER TEMPO	Master Tempo On/Off	
	4	TEMPO RANGE	Tempo Range	
	5	SYNC	Sync On/Off	
			長押し INSTANT DOUBLES	
	6	MASTER	Master	
	7	JOG MODE	Vinyl On/Off	
	8	VINYL SPEED ADJUST ON/OFF	No function assigned here	
	9	VINYL SPEED ADJUST (GUI/SHORT C)	Vinyl Speed Adjust (Touch / brake)	
	10	JOG ADJUST	No function assigned here	
	11	TRACK SEARCH	PREV / NEXT TRACK	
	12	SEARCH	BEAT JUMP	
	13	REVERSE	Reverse	
	14	SLIP	SLIP mode On/Off	
	15	SHIFT	Shift	
	16	LOOP IN	Loop in / Loop in adjust	
			長押し 4 BEAT Loop	
	17	LOOP OUT	Loop out / Loop out adjust	
	18	RELOOP/EXIT	Reloop/Exit	
			CALL NEXT / 2X CUE/LOOP CALL, FWD	
			ループ再生中 Loop Size Select (Double)	
			CALL PREV / 1/2X CUE/LOOP CALL, REV	
			ループ再生中 Loop Size Select (Half)	
	20	DELETE	DELETE	
	21	MEMORY	MEMORY	
22	PLAY/PAUSE	再生/一時停止		
23	CUE	CUE設定/再生, Back Cue		
24	LOAD	トラックのロード		
		2回押す INSTANT DOUBLES		
25	NEEDLE SEARCH (GUI/全体波形表示部)	NEEDLE SEARCH		
26	TIME MODE / AUTO CUE (GUI/時間表示部)	TIME MODE切換 (Remain/EIapse)		
		長押し A.Cue On/Off		
27	QUANTIZE	Quantize on/off		
2, EFFECT (MIXER MODE: MIDI CONTROL時)				
1	BEAT	RIGHT	FX beat up	
		LEFT	FX beat down	
2	TAP		FX TAP	FX AUTO BEAT
3	EFFECT SELECT/ BEAT FX BANK(GUI)	DELAY	FX1: DELAY	
		ECHO	FX1: ECHO	
		PING PONG	FX1: PING PONG	
		SPIRAL	FX1: SPIRAL	
		REVERB	FX1: REVERB	
		TRANS	FX1: TRANS	
		FILTER	FX1: FILTER	
		FLANGER	FX1: FLANGER	
		PHASER	FX1: PHASER	
		PITCH	FX1: PITCH	
		SLIP ROLL	FX1: SLIP ROLL	
		ROLL	FX1: ROLL	
		VINYL BRAKE	FX1: VINYL BRAKE	
		HELIX	FX1: HELIX	
		CF A	FX CH1: On (others: Off)	
		CF B	FX CH2: On (others: Off)	
4	CH SELECT	MIC	No function assigned here	
		AUX	SAMPLER is On when AUX SELECT is Off (others: Off)	
		1CH	FX CH3: On (others: Off)	
		2CH	FX CH4: On (others: Off)	
5	TIME	TIME control		
6	LEVEL DEPTH	FX1 level control		
7	EFFECT ON/OFF	FX1 On/Off	Select FX1	
8	COLOR	SOUND COLOR FX parameter control (CH1 - 2)		
9	PARAMETER	SOUND COLOR FX parameter control		
10	SPACE	SOUND COLOR FX (SPACE) On/Off		
11	DUB ECHO	SOUND COLOR FX (DUB ECHO) On/Off		
12	SWEEP	SOUND COLOR FX (SWEEP) On/Off		
13	NOISE	SOUND COLOR FX (NOISE) On/Off		
14	CRUSH	SOUND COLOR FX (CRUSH) On/Off		
15	FILTER	SOUND COLOR FX (FILTER) On/Off		
16	X-PAD (GUI)	No function assigned here		
3, MIXER (MIXER MODE: MIDI CONTROL時)				
1	CROSSFADER	クロスフェーダー		
2	CH FADER	チャンネルフェーダー		
3	CROSSFADER CURVE	クロスフェーダーカーブ		
4	TRIM	Gain		
5	HI	EQ (High)		
6	MID	EQ (Mid)		
7	LOW	EQ (Low)		
8	HEADPHONES MIXING	No function assigned here		
9	HEADPHONES LEVEL	No function assigned here		
10	CUE (Headphone)	Headphone CUE On/Off		
11	MASTER CUE (Headphone)	No function assigned here		
12	LINK CUE (Headphone)	No function assigned here		
13	MASTER LEVEL	No function assigned here		
14	BOOTH MONITOR LEVEL	No function assigned here		
15	AUX SELECT	No function assigned here		
16	AUX TRIM	SAMPLER volume		

GROUP	No.	NAME	FUNCTION	+SHIFT
4, BROWSER				
1	Rotary Selector	回す	Browse (Track/Folder Select)	拡大波形 Zoom In/Out
		押す	エリア移動 (順周り)	
	BACK		階層移動, エリア移動 (逆周り)	リスト表示切替
	TAG TRACK/REMOVE		Add/delete track to/from TAG LIST	Related Tracks(関連するトラック)を表示
	TRACK FILTER		TRACK FILTER OPEN/CLOSE	
	DECK 1/3	押す	Deck 1とDeck 3の切換	
DECK 2/4	押す	Deck 2とDeck 4の切換		
5, PERFORMANCE PADS				
1	HOT CUE		HOT CUE	KEYBOARD
			BEAT LOOP	KEY SHIFT
			SLIP LOOP	PAD FX 1
			BEAT JUMP	PAD FX 2
5	PERFORMANCE PAD A	モード		
		HOT CUE	Set/call Hot Cue A	Delete HOT CUE A
		BEAT LOOP	1/4 BEAT LOOP	
		PAD FX1	PAD FX1 (page1)	PAD FX1 (page2)
		BEAT JUMP	BEAT JUMP	No function assigned here
		KEYBOARD	HOT CUE選択/KEY SHIFT	Delete HOT CUE
		KEY SHIFT	KEY SHIFT	No function assigned here
		PAD FX2	PAD FX2 (page1)	PAD FX2 (page2)
SAMPLER	SAMPLER slot1再生	SAMPLER slot1停止		
6	PERFORMANCE PAD B	モード		
		HOT CUE	Set/call Hot Cue B	Delete HOT CUE B
		BEAT LOOP	1/2 BEAT LOOP	
		PAD FX1	PAD FX1 (page1)	PAD FX1 (page2)
		BEAT JUMP	BEAT JUMP	No function assigned here
		KEYBOARD	HOT CUE選択/KEY SHIFT	Delete HOT CUE
		KEY SHIFT	KEY SHIFT	No function assigned here
		PAD FX2	PAD FX2 (page1)	PAD FX2 (page2)
SAMPLER	SAMPLER slot2再生	SAMPLER slot2停止		
7	PERFORMANCE PAD C	モード		
		HOT CUE	Set/call Hot Cue C	Delete HOT CUE C
		BEAT LOOP	1 BEAT LOOP	
		PAD FX1	PAD FX1 (page1)	PAD FX1 (page2)
		BEAT JUMP	BEAT JUMP	No function assigned here
		KEYBOARD	HOT CUE選択/KEY SHIFT	Delete HOT CUE
		KEY SHIFT	KEY SHIFT	No function assigned here
		PAD FX2	PAD FX2 (page1)	PAD FX2 (page2)
SAMPLER	SAMPLER slot3再生	SAMPLER slot3停止		
8	PERFORMANCE PAD D	モード		
		HOT CUE	Set/call Hot Cue D	Delete HOT CUE D
		BEAT LOOP	2 BEAT LOOP	
		PAD FX1	PAD FX1 (page1)	PAD FX1 (page2)
		BEAT JUMP	BEAT JUMP	No function assigned here
		KEYBOARD	HOT CUE選択/KEY SHIFT	Delete HOT CUE
		KEY SHIFT	KEY SHIFT	No function assigned here
		PAD FX2	PAD FX2 (page1)	PAD FX2 (page2)
SAMPLER	SAMPLER slot4再生	SAMPLER slot4停止		
9	PERFORMANCE PAD E	モード		
		HOT CUE	Set/call Hot Cue E	Delete HOT CUE E
		BEAT LOOP	4 BEAT LOOP	
		PAD FX1	PAD FX1 (page1)	PAD FX1 (page2)
		BEAT JUMP	BEAT JUMP	No function assigned here
		KEYBOARD	HOT CUE選択/KEY SHIFT	Delete HOT CUE
		KEY SHIFT	KEY SHIFT	No function assigned here
		PAD FX2	PAD FX2 (page1)	PAD FX2 (page2)
SAMPLER	SAMPLER slot5再生	SAMPLER slot5停止		
10	PERFORMANCE PAD F	モード		
		HOT CUE	Set/call Hot Cue F	Delete HOT CUE F
		BEAT LOOP	8 BEAT LOOP	
		PAD FX1	PAD FX1 (page1)	PAD FX1 (page2)
		BEAT JUMP	BEAT JUMP	No function assigned here
		KEYBOARD	HOT CUE選択/KEY SHIFT	Delete HOT CUE
		KEY SHIFT	KEY SHIFT	No function assigned here
		PAD FX2	PAD FX2 (page1)	PAD FX2 (page2)
SAMPLER	SAMPLER slot6再生	SAMPLER slot6停止		
11	PERFORMANCE PAD G	モード		
		HOT CUE	Set/call Hot Cue G	Delete HOT CUE G
		BEAT LOOP	16 BEAT LOOP	
		PAD FX1	PAD FX1 (page1)	PAD FX1 (page2)
		BEAT JUMP	BEAT JUMP	BEAT JUMP Previous Page
		KEYBOARD	HOT CUE選択/KEY SHIFT	KEYBOARD Previous Page
		KEY SHIFT	KEY SHIFT	KEY SHIFT Previous Page
		PAD FX2	PAD FX2 (page1)	PAD FX2 (page2)
SAMPLER	SAMPLER slot7再生	SAMPLER slot7停止		
12	PERFORMANCE PAD H	モード		
		HOT CUE	Set/call Hot Cue H	Delete HOT CUE H
		BEAT LOOP	32 BEAT LOOP	
		PAD FX1	PAD FX1 (page1)	PAD FX1 (page2)
		BEAT JUMP	BEAT JUMP	BEAT JUMP Next Page
		KEYBOARD	HOT CUE選択/KEY SHIFT	KEYBOARD Next Page
		KEY SHIFT	KEY SHIFT	KEY SHIFT Next Page
		PAD FX2	PAD FX2 (page1)	PAD FX2 (page2)
SAMPLER	SAMPLER slot8再生	SAMPLER slot8停止		