

XDJ-XZ

Hardware Diagram for rekordbox dj



GROUP	No.	NAME	FUNCTION	+SHIFT
1, DECK *機能は左右デッキ共通です。				
	1	JOG	スクラッチ (Vinyl On) ピッチベンド (Vinyl Off)	Search
	2	TEMPO	テンポ調整	
	3	TEMPO RESET	テンポリセット	
	4	MASTER TEMPO	Master Tempo On/Off	
	5	TEMPO RANGE	Tempo Range	
	6	SYNC	Sync On/Off	
	7	MASTER	Master	
	8	JOG ADJUST	JOG ADJUST	
	9	JOG MODE	Vinyl On/Off	
	10	VINYL SPEED ADJUST	Vinyl Speed Adjust	
	11	TRACK SEARCH	PREV / NEXT TRACK	
	12	SEARCH	BEAT JUMP(再生中:8拍, 停止中:微調整)	
	13	SHIFT	Shift	
	14	REVERSE	DECK切り替え Reverse	
	15	SLIP	SLIP mode On/Off	
	16	4/8 BEAT	4 BEAT Loop	
	17	LOOP IN	8 BEAT Loop	
	18	LOOP OUT	Loop in / Loop in adjust	
	19	RELOOP/EXIT	4 BEAT Loop	
	20	CALL NEXT / 2X	Loop out / Loop out adjust	
	21	DELETE	ReLoop/Exit	
	22	MEMORY	CUE/LOOP CALL, FWD	
	23	PLAY/PAUSE	Loop Size Select (Double)	
	24	CUE	CUE/LOOP CALL, REV	
	25	JOG RING	Loop Size Select (Half)	
	26	LOAD	DELETE	
	27	NEEDLE SEARCH	MEMORY	
			再生一時停止	
			Cue設定/再生、BackCue	
			トラックのロード	
			INSTANT DOUBLES	
			NEEDLE SEARCH	
2, EFFECT				
3, MIXER				
4, BROWSER				
	1	Rotary Selector	Browse(Track/Folder Select)	拡大波形 Zoom In/Out
	2	BACK	エリア移動 (逆周リ)	リスト表示切替
	3	TAG TRACK/REMOVE	タグ Listへの登録、解除	Related Tracks 表示切替
	4	TRACK FILTER	トラックフィルタ OPEN/CLOSE	
	5	DECK QUANTIZE	Deck Quantize on/off	
	6	TIME MODE / AUTO CUE	TIME MODE切替(Remain/Elapse)	
	7	DECK 1/3 (SHORT CUT画面)	A.Cue On/Off	
	8	DECK 2/4 (SHORT CUT画面)	Deck 1とDeck 3の切替	
			Deck 2とDeck 4の切替	
5, PERFORMANCE PADS				
	1	HOT CUE	HOT CUE	KEY BOARD
	2	BEAT LOOP	BEAT LOOP	KEY SHIFT
	3	SLIP LOOP	PAD FX 1	PAD FX2
	4	BEAT JUMP	BEAT JUMP	SAMPLER

GROUP	No.	NAME	FUNCTION	+SHIFT
5, PERFORMANCE PADS				
	PERFORMANCE PAD A			
		HOT CUE	HOT CUE A設定/再生	Delete HOT CUE A
		BEAT LOOP	1/4 BEAT LOOP	1/4 BEAT LOOP
		PAD FX1	PAD FX1 (page1)	PAD FX1 (page2)
		BEAT JUMP	BEAT JUMP	
		KEYBOARD	HOT CUE選択KEY SHIFT	Delete HOT CUE
		KEY SHIFT	KEY SHIFT	
		PAD FX2	PAD FX2 (page1)	PAD FX2 (page2)
		SAMPLER	SAMPLER slot1再生	SAMPLER slot1停止
	PERFORMANCE PAD B			
		HOT CUE	HOT CUE B設定/再生	Delete HOT CUE B
		BEAT LOOP	1/2 BEAT LOOP	1/2 BEAT LOOP
		PAD FX1	PAD FX1 (page1)	PAD FX1 (page2)
		BEAT JUMP	BEAT JUMP	
		KEYBOARD	HOT CUE選択KEY SHIFT	Delete HOT CUE
		KEY SHIFT	KEY SHIFT	
		PAD FX2	PAD FX2 (page1)	PAD FX2 (page2)
		SAMPLER	SAMPLER slot2再生	SAMPLER slot2停止
	PERFORMANCE PAD C			
		HOT CUE	HOT CUE C設定/再生	Delete HOT CUE C
		BEAT LOOP	1 BEAT LOOP	1 BEAT LOOP
		PAD FX1	PAD FX1 (page1)	PAD FX1 (page2)
		BEAT JUMP	BEAT JUMP	
		KEYBOARD	HOT CUE選択KEY SHIFT	Delete HOT CUE
		KEY SHIFT	KEY SHIFT	
		PAD FX2	PAD FX2 (page1)	PAD FX2 (page2)
		SAMPLER	SAMPLER slot3再生	SAMPLER slot3停止
	PERFORMANCE PAD D			
		HOT CUE	HOT CUE D設定/再生	Delete HOT CUE D
		BEAT LOOP	2 BEAT LOOP	2 BEAT LOOP
		PAD FX1	PAD FX1 (page1)	PAD FX1 (page2)
		BEAT JUMP	BEAT JUMP	
		KEYBOARD	HOT CUE選択KEY SHIFT	Delete HOT CUE
		KEY SHIFT	KEY SHIFT	
		PAD FX2	PAD FX2 (page1)	PAD FX2 (page2)
		SAMPLER	SAMPLER slot4再生	SAMPLER slot4停止
	PERFORMANCE PAD E			
		HOT CUE	HOT CUE E設定/再生	Delete HOT CUE E
		BEAT LOOP	4 BEAT LOOP	4 BEAT LOOP
		PAD FX1	PAD FX1 (page1)	PAD FX1 (page2)
		BEAT JUMP	BEAT JUMP	
		KEYBOARD	HOT CUE選択KEY SHIFT	Delete HOT CUE
		KEY SHIFT	KEY SHIFT	
		PAD FX2	PAD FX2 (page1)	PAD FX2 (page2)
		SAMPLER	SAMPLER slot5再生	SAMPLER slot5停止
	PERFORMANCE PAD F			
		HOT CUE	HOT CUE F設定/再生	Delete HOT CUE F
		BEAT LOOP	8 BEAT LOOP	8 BEAT LOOP
		PAD FX1	PAD FX1 (page1)	PAD FX1 (page2)
		BEAT JUMP	BEAT JUMP	
		KEYBOARD	HOT CUE選択KEY SHIFT	Delete HOT CUE
		KEY SHIFT	KEY SHIFT	
		PAD FX2	PAD FX2 (page1)	PAD FX2 (page2)
		SAMPLER	SAMPLER slot6再生	SAMPLER slot6停止
	PERFORMANCE PAD G			
		HOT CUE	HOT CUE G設定/再生	Delete HOT CUE G
		BEAT LOOP	16 BEAT LOOP	16 BEAT LOOP
		PAD FX1	PAD FX1 (page1)	PAD FX1 (page2)
		BEAT JUMP	BEAT JUMP	BEAT JUMP Previous Page
		KEYBOARD	HOT CUE選択KEY SHIFT	KEYBOARD Previous Page
		KEY SHIFT	KEY SHIFT	KEY SHIFT Previous Page
		PAD FX2	PAD FX2 (page1)	PAD FX2 (page2)
		SAMPLER	SAMPLER slot7再生	SAMPLER slot7停止
	PERFORMANCE PAD H			
		HOT CUE	HOT CUE H設定/再生	Delete HOT CUE H
		BEAT LOOP	32 BEAT LOOP	32 BEAT LOOP
		PAD FX1	PAD FX1 (page1)	PAD FX1 (page2)
		BEAT JUMP	BEAT JUMP	BEAT JUMP Next Page
		KEYBOARD	HOT CUE選択KEY SHIFT	KEYBOARD Next Page
		KEY SHIFT	KEY SHIFT	KEY SHIFT Next Page
		PAD FX2	PAD FX2 (page1)	PAD FX2 (page2)
		SAMPLER	SAMPLER slot8再生	SAMPLER slot8停止