

XDJ-XZ

MIDI Message List



グループ	型	ユーザーインターフェイス		MIDIイン		MIDI-IN			MIDI-OUT			詳細 (Data2)				
				参考情報												
				MIDIチャンネル	Status (16)	Data1 (16)	Data2 (16)	Status (16)	Data1 (16)	Data2 (16)						
5. PERFORMANCE PADS	9[L,R]	パフォーマンスパッド	押す	HOT CUEモード	HOT CUEモード		6/7/8/9 NOTE Sn 4	4	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)			
					BEAT LOOPモード		+SHIFT 6/7/8/9 NOTE Sn 12	C	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯			
					SLIP LOOPモード		6/7/8/9 NOTE Sn 20	14	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)			
					BEAT JUMPモード		+SHIFT 6/7/8/9 NOTE Sn 28	1C	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯			
					EXTENSION1モード		6/7/8/9 NOTE Sn 36	24	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)			
					EXTENSION2モード		+SHIFT 6/7/8/9 NOTE Sn 44	2C	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯			
					EXTENSION3モード		6/7/8/9 NOTE Sn 52	34	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)			
					EXTENSION4モード		+SHIFT 6/7/8/9 NOTE Sn 60	3C	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯			
					HOT CUEモード		6/7/8/9 NOTE Sn 68	44	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)			
					BEAT LOOPモード		+SHIFT 6/7/8/9 NOTE Sn 76	4C	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯			
					SLIP LOOPモード		6/7/8/9 NOTE Sn 84	54	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)			
					BEAT JUMPモード		+SHIFT 6/7/8/9 NOTE Sn 92	5C	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯			
					EXTENSION1モード		6/7/8/9 NOTE Sn 100	64	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)			
					EXTENSION2モード		+SHIFT 6/7/8/9 NOTE Sn 108	6C	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯			
					EXTENSION3モード		6/7/8/9 NOTE Sn 116	74	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)			
					EXTENSION4モード		+SHIFT 6/7/8/9 NOTE Sn 124	7C	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯			
					HOT CUEモード		6/7/8/9 NOTE Sn 5	5	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)			
					BEAT LOOPモード		+SHIFT 6/7/8/9 NOTE Sn 13	D	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯			
					SLIP LOOPモード		6/7/8/9 NOTE Sn 21	15	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)			
					BEAT JUMPモード		+SHIFT 6/7/8/9 NOTE Sn 29	1D	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯			
					EXTENSION1モード		6/7/8/9 NOTE Sn 37	25	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)			
					EXTENSION2モード		+SHIFT 6/7/8/9 NOTE Sn 45	2D	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯			
					EXTENSION3モード		6/7/8/9 NOTE Sn 53	35	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)			
					EXTENSION4モード		+SHIFT 6/7/8/9 NOTE Sn 61	3D	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯			
					HOT CUEモード		6/7/8/9 NOTE Sn 69	45	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)			
					BEAT LOOPモード		+SHIFT 6/7/8/9 NOTE Sn 77	4D	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯			
					SLIP LOOPモード		6/7/8/9 NOTE Sn 85	55	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)			
					BEAT JUMPモード		+SHIFT 6/7/8/9 NOTE Sn 93	5D	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯			
					EXTENSION1モード		6/7/8/9 NOTE Sn 101	65	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)			
					EXTENSION2モード		+SHIFT 6/7/8/9 NOTE Sn 109	6D	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯			
	EXTENSION3モード		6/7/8/9 NOTE Sn 117	75	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)							
	EXTENSION4モード		+SHIFT 6/7/8/9 NOTE Sn 125	7D	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯							
	HOT CUEモード		6/7/8/9 NOTE Sn 6	6	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)							
	BEAT LOOPモード		+SHIFT 6/7/8/9 NOTE Sn 14	E	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯							
	SLIP LOOPモード		6/7/8/9 NOTE Sn 22	16	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)							
	BEAT JUMPモード		+SHIFT 6/7/8/9 NOTE Sn 30	1E	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯							
	EXTENSION1モード		6/7/8/9 NOTE Sn 38	26	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)							
	EXTENSION2モード		+SHIFT 6/7/8/9 NOTE Sn 46	2E	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯							
	EXTENSION3モード		6/7/8/9 NOTE Sn 54	36	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)							
	EXTENSION4モード		+SHIFT 6/7/8/9 NOTE Sn 62	3E	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯							
	HOT CUEモード		6/7/8/9 NOTE Sn 70	46	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)							
	BEAT LOOPモード		+SHIFT 6/7/8/9 NOTE Sn 78	4E	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯							
	SLIP LOOPモード		6/7/8/9 NOTE Sn 86	56	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)							
	BEAT JUMPモード		+SHIFT 6/7/8/9 NOTE Sn 94	5E	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯							
	EXTENSION1モード		6/7/8/9 NOTE Sn 102	66	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)							
	EXTENSION2モード		+SHIFT 6/7/8/9 NOTE Sn 110	6E	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯							
	EXTENSION3モード		6/7/8/9 NOTE Sn 118	76	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)							
	EXTENSION4モード		+SHIFT 6/7/8/9 NOTE Sn 126	7E	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯							
	HOT CUEモード		6/7/8/9 NOTE Sn 7	7	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)							
	BEAT LOOPモード		+SHIFT 6/7/8/9 NOTE Sn 15	F	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯							
	SLIP LOOPモード		6/7/8/9 NOTE Sn 23	17	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)							
	BEAT JUMPモード		+SHIFT 6/7/8/9 NOTE Sn 31	1F	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯							
	EXTENSION1モード		6/7/8/9 NOTE Sn 39	27	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)							
	EXTENSION2モード		+SHIFT 6/7/8/9 NOTE Sn 47	2F	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯							
	EXTENSION3モード		6/7/8/9 NOTE Sn 55	37	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)							
	EXTENSION4モード		+SHIFT 6/7/8/9 NOTE Sn 63	3F	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯							
	HOT CUEモード		6/7/8/9 NOTE Sn 71	47	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)							
	BEAT LOOPモード		+SHIFT 6/7/8/9 NOTE Sn 79	4F	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯							
	SLIP LOOPモード		6/7/8/9 NOTE Sn 87	57	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)							
	BEAT JUMPモード		+SHIFT 6/7/8/9 NOTE Sn 95	5F	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯							
EXTENSION1モード		6/7/8/9 NOTE Sn 103	67	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)								
EXTENSION2モード		+SHIFT 6/7/8/9 NOTE Sn 111	6F	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯								
EXTENSION3モード		6/7/8/9 NOTE Sn 119	77	hh	<- same as MIDI IN			OFF-0(0x00), ON-127(0x7F)								
EXTENSION4モード		+SHIFT 6/7/8/9 NOTE Sn 127	7F	hh	<- same as MIDI IN			MIDI OUT) 0(0x00); OFF(傾点灯),1(0x01)-127(0x7F); 色番号の指定色でLED点灯								
6. OTHERS	1	USB STOP (USB 1)	押す									(Hardware Control)				
	2	USBアクセスランプ (USB 1)	押す									(Hardware Control)				
	3	USB STOP (USB 2)	押す									(Hardware Control)				
	4	USBアクセスランプ (USB 2)	押す									(Hardware Control)				
	5	MASTER REC	押す									(Hardware Control)				
	6	TRACK MARKER	押す									(Hardware Control)				
-	PC Control mode				1/2/3/4	CC	Bn	100	64	hh		OFF-0(0x00), ON-127(0x7F) ([BROWSE] > [MIDI] > [LOAD])				
-	Load	Deck 1	LOADボタンイルミネーション点滅用		12	NOTE					9B	0	hh	OFF-0(0x00), ON-127(0x7F)		
		Deck 2			12	NOTE					9B	1	hh	OFF-0(0x00), ON-127(0x7F)		
		Deck 3			12	NOTE					9B	2	hh	OFF-0(0x00), ON-127(0x7F)		
		Deck 4			12	NOTE					9B	3	hh	OFF-0(0x00), ON-127(0x7F)		
7. JOG DISPLAY	1[L,R]	Current Position Bar	Deck 1	12	CC							BB	0	MSB	Min (MSB : 0x00, LSB : 0x00) ~ Max (MSB : 0x02, LSB : 0x07) 0 ~ 359 [degree]	
			Deck 2	12	CC								BB	1	MSB	Min (MSB : 0x00, LSB : 0x00) ~ Max (MSB : 0x02, LSB : 0x07) 0 ~ 359 [degree]
			Deck 3	12	CC								BB	2	MSB	Min (MSB : 0x00, LSB : 0x00) ~ Max (MSB : 0x02, LSB : 0x07) 0 ~ 359 [degree]
			Deck 4	12	CC								BB	3	MSB	Min (MSB : 0x00, LSB : 0x00) ~ Max (MSB : 0x02, LSB : 0x07) 0 ~ 359 [degree]
	2[R]	Cue Marker	Deck 1	12	CC							BB	4	MSB	Min (MSB : 0x00, LSB : 0x00) ~ Max (MSB : 0x02, LSB : 0x07) 0 ~ 359 [degree]	
			Deck 2	12	CC							BB	5	MSB	Min (MSB : 0x00, LSB : 0x00) ~ Max (MSB : 0x02, LSB : 0x07) 0 ~ 359 [degree]	
			Deck 3	12	CC							BB	6	MSB	Min (MSB : 0x00, LSB : 0x00) ~ Max (MSB : 0x02, LSB : 0x07) 0 ~ 359 [degree]	
			Deck 4	12	CC							BB	7	MSB	Min (MSB : 0x00, LSB : 0x00) ~ Max (MSB : 0x02, LSB : 0x07) 0 ~ 359 [degree]	