**Pioneer**

DJ MIXER

DJM−T1

DJM-T1 Update manual of the firmware

Pioneer

step1. Connect DJM-T1 with PC/Mac OS

1-1　Turn off the power of DJM-T1.
　　　Then connect USB CABLE
　　　with PC/Mac OS and DJM-T1.

1-2　Keep pushing the "FX2 EFFECT ON/OFF"button
　　　and "SELECT(Deck B&D side)"button,
　　　and turn on the power of DJM-T1.

1-3　DJM-T1 wakes up with "Update mode".
　　　Under the "Update mode",
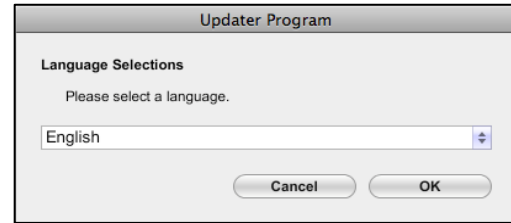　　　the top LED of CH2 level indicator blinks.

1-2 Push

1-2 Keep pushing

1-3 Blinks
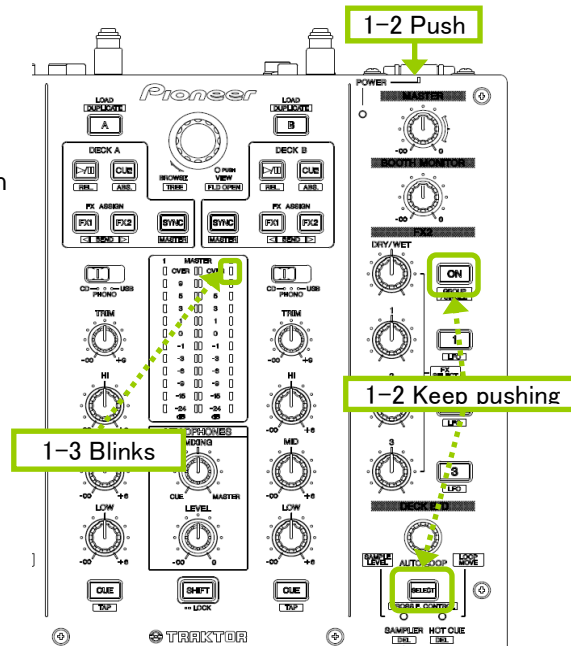
step2. Update

2-1　Windows PC:
　　　　　Put "updtDJM-T1_X_XX.zip" to optional folder on PC, then extract it.
　　　　　Double click "updtDJM-T1_X_XX.exe".

2-2　Mac OS:
　　　　　Put "updtDJM-T1_X_XX.dmg" to optional folder on Mac, then extract it.
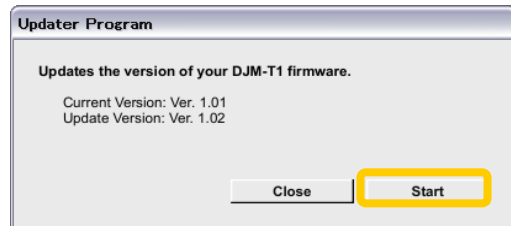　　　　　Double click "updtDJM-T1_X_XX.app".

step3. Select a language.
　　Select a language. Then click "OK"
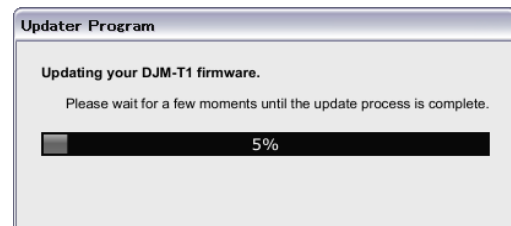　　(Follow example is in English)

```
Updater Program
Language Selections
    Please select a language.

    English                              ⬍

              ( Cancel )    ( OK )
```

step4. Confirm a firmware version.
　　Confirm the "Update Version" is X.XX,
　　then click "Start".

```
Updater Program

Updates the version of your DJM-T1 firmware.

    Current Version: Ver. 1.01
    Update Version: Ver. 1.02

                        Close      Start
```

step5. Updating
　　Please wait till the progress bar
　　reach at the right end.

```
Updater Program

Updating your DJM-T1 firmware.

    Please wait for a few moments until the update process is complete.

    [          5%          ]
```

step6. Completion of update
　　Click "OK".
　　DJM-T1's CH1 level indicators
　　and CH2 level indicators are all lighting.

　　To wake up DJM-T1 with new firmware,
　　turn off the power of DJM-T1, then turn on it.

```
Updater Program

The update of your version of the DJM-T1 firmware is now complete.

                              OK
```
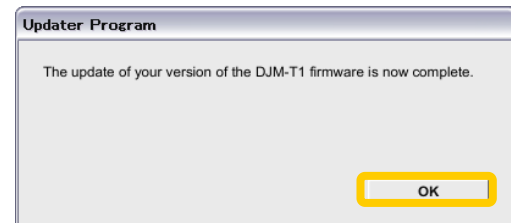
Checking the firmware version

1 Press the [UTILITY (WAKE UP)] button
 for over 1 second.

2 Press the [LOAD (DUPLICATE) A] button.

3 If the top LED of CH1 level indicator blinks,
 it means the firmware version is before 2.00.

 If the top LED of CH1 level indicator lights down,
 the firmware version is indicated by the segments
 of the channel level and masterlevel indicators that light.
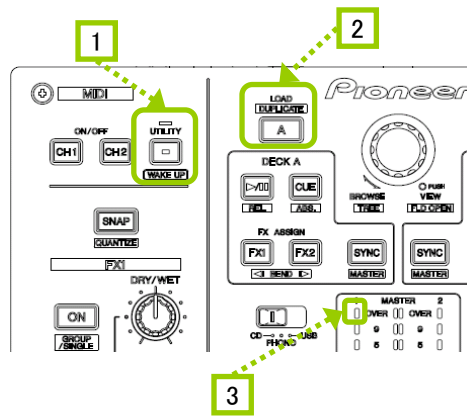
- Number of segments of the CH1 level indicator lit :
   First digit

- Number of segments of the master channel level indicator lit :
   Second digit

- Number of segments of the CH2 level indicator lit :
   Third digit

example : version "1.07"

1 . 0 7
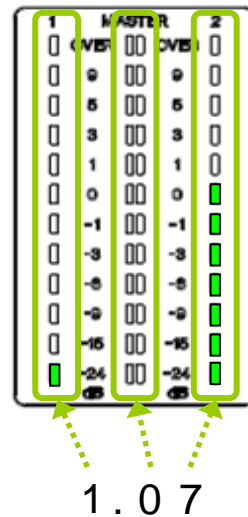
Reference

This updater can be used on following operation system.

Windows	Windows XP/Windows Vista/Windows 7/Windows 8
Mac OS	Mac OS X v10.6, 10.7, 10.8

The duration for update is about 5 minutes on Windows XP, 1minutes on other operationg system.

About trademarks and registered trademarks

・Pioneer is a registered trademark of PIONEER CORPORATION.